


## 5.2.6 Password Setting and what if forgotten

Choose any account to change its password (password is only digital)

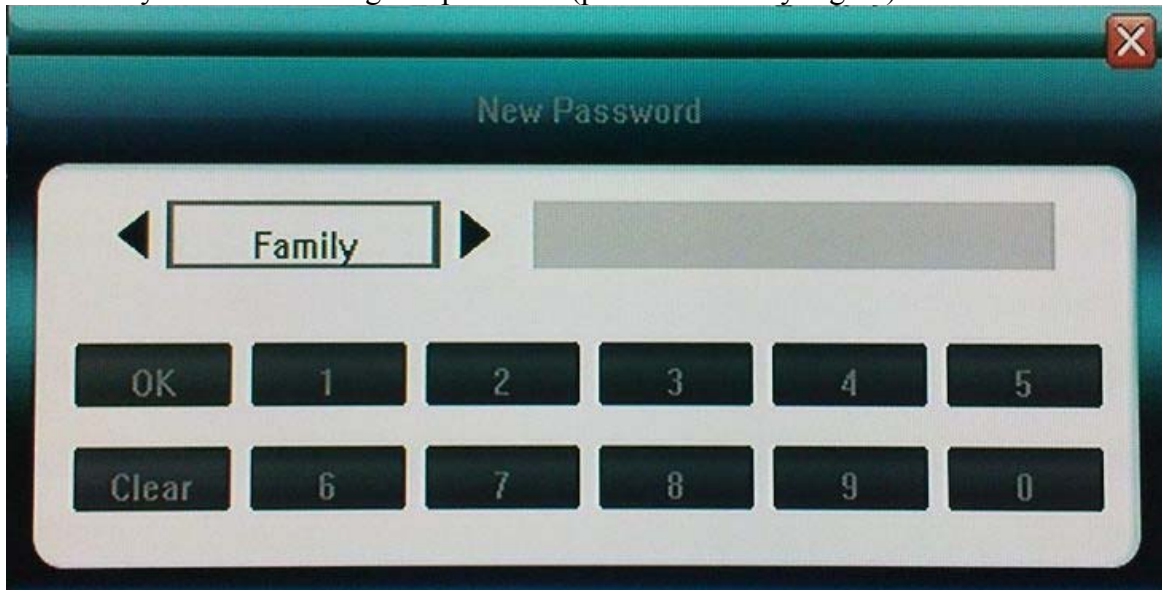

**Default password of Admin is [888888] User is [666666]**

If password forgotten, turn off the machine, open this DVR case, find the JP15 jumper, it is near the faceplate; power on the machine, find some jumper cap to make it closed(short) and hold it until “beep” sound heard, it will return back to default password of “Admin” and “User” account.

