

# Reset Camera Password

The screenshot displays the ONVIF web interface. On the left, under the 'HD IPC' header, there is a navigation menu with the following items: Identification, Time settings, Maintenance, Network settings, User management (highlighted with a red arrow), Certificates, System log, Relays, Actions, Triggers, Web page, and Events. Below this menu is the 'NVT' section with a 'Refresh' button and a 'VideoMainSource: MainStream' indicator. A video feed is partially visible on the left. On the right, under the 'User management' header, there are 'Policies: Backup Restore' buttons and a 'Users:' section. Two user entries are shown: 'admin' with role 'administrator' and 'guest' with role 'user'. A red arrow points from the 'User management' menu item to the 'Modify' button for the 'admin' user. At the bottom of the user list are 'Create', 'Modify', and 'Delete' buttons.

Camera => user management => Modify

The screenshot shows the 'User management' form for modifying a user. The form includes the following fields: 'Name:' with the value 'admin', 'Password:', 'Repeat password:', and 'Role:' with a dropdown menu showing 'administrator'. At the bottom of the form are 'Apply' and 'Cancel' buttons.

Method 2: (safe)

Use the password recovery tool (with the camera must use ipclient, on ie it cannot be)


**Camera :**

After connecting the camera by ip client, the soft will notify the password entered wrongly and give an error code



=> bf0ad7

Use the above error code to enter the tool, verification code = dvr, and then press the generate

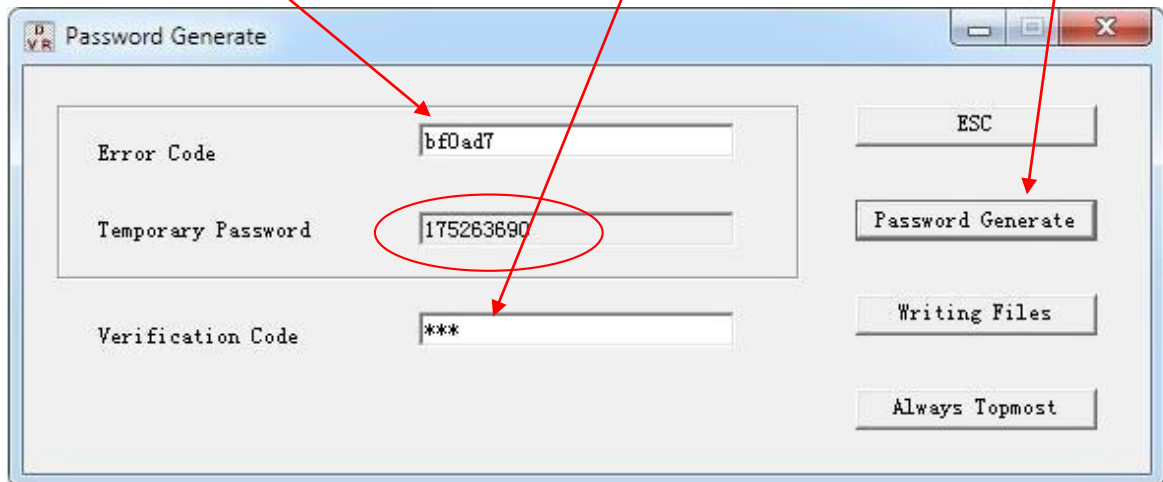

password

We will get a temporary pass as shown above, go to ipclient, right click the camera channel, select modify channel, enter the **user: ipc, pass: temporary pass just got**

**Device Config**

nvsip ID:

User name:

Password:


Note: the above password is for temporary account ipc, this account can only be used for 2 days and has no function. After logging in, you must reset the default camera to get back the blank password of the admin account

IPCam Setting

System Setting Maintenance Logs

Update method:

Progress:



## 2) Camera 160B – 161B – 170B – 180B – 182C – 190B – 202B (3m ipnc series):


Using soft Onvif Device Management, choose camera => maintenance => Soft reset

The screenshot displays the Onvif Device Management web interface. On the left, there is a navigation menu for 'HD IPC' with the Onvif logo and a list of menu items: Identification, Time settings, Maintenance (highlighted in red), Network settings, User management, Certificates, System log, Relays, Actions, Triggers, Web page, and Events. Below this is the 'NVT' section with a 'Refresh' button and a video source indicator 'VideoMainSource: MainStream'. A video feed is visible below the NVT section. On the right, the 'Maintenance' panel is active, showing several options: Configuration (Backup, Restore, Unsupported), Soft factory reset (Soft reset), Hard factory reset (Hard reset), Reboot device (Reboot), and Firmware (Upgrade, V2.1.1209, Unsupported). Two red arrows originate from the 'Soft reset' button and point towards the 'Reboot' button, indicating a sequence of actions.

After reset pass = admin


# Password reset DVR

After entering the wrong password on the screen, an error code will be displayed

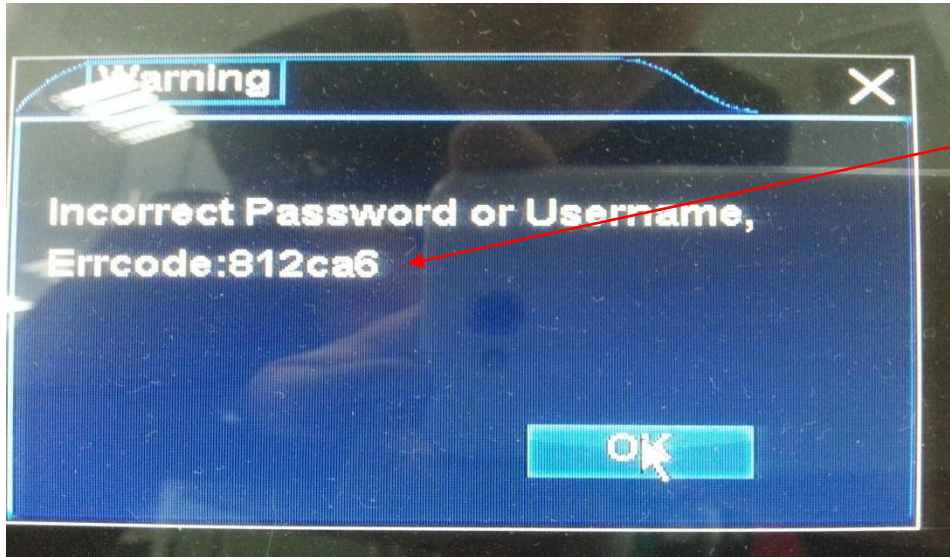

=> 812ca6

Enter error code, verification code = dvr, press password generate

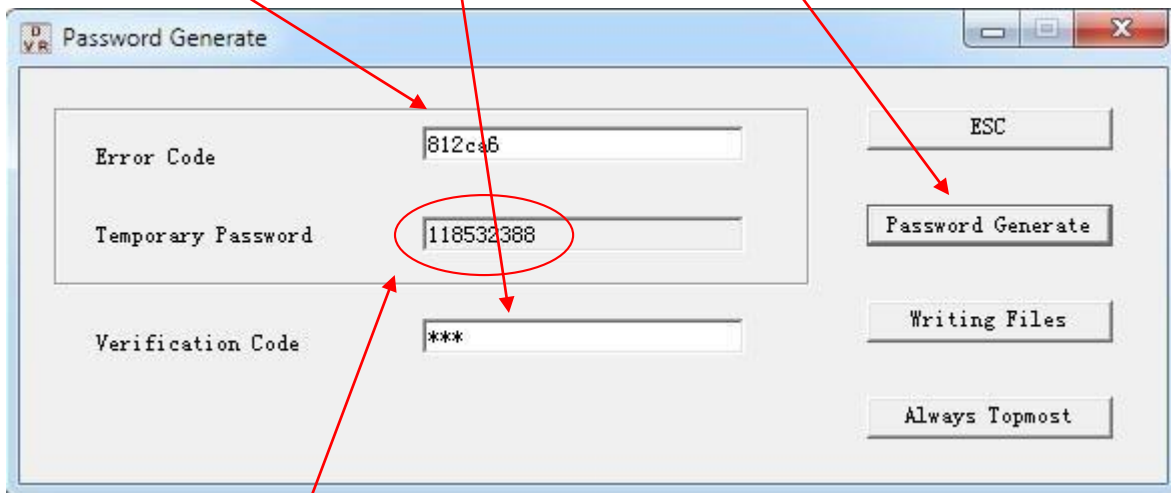

We have a temporary password

On the recorder enter the user: jdvr, pass = temporary password will have a login will be logged into the recorder, but this is a temporary account can only be used for 2 days and locked all functions, can only be used to reset default. The system of the recorder, after reset, can be logged into the recorder by the user admin, the password is empty:

**Main menu => System management => Maintenance => Reset Factory**

